



Upgrading Firmware for TP-Link Archer C20 v4.x

1. Check that you are in fact upgrading the C20 v4 – the model should be “**Archer C20**” and the number should say “**v4**”

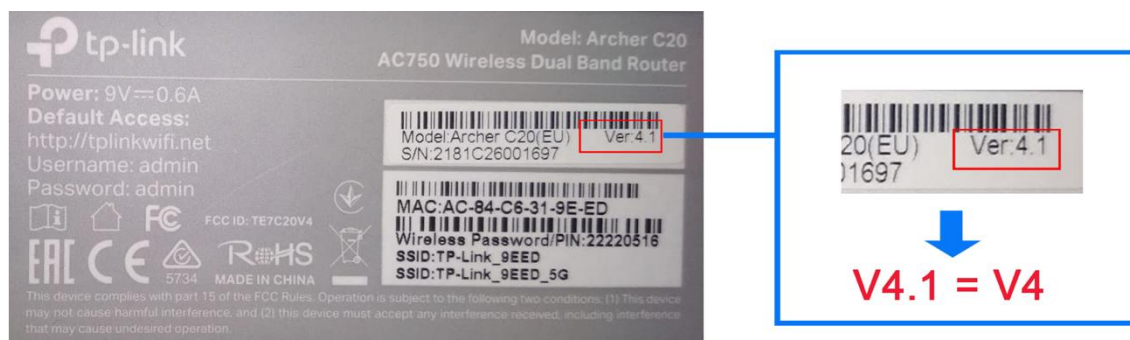

2. Download the latest firmware file for the router → [HERE](#)
3. Log in the router’s management interface by browsing to here. <http://192.168.0.1/> the username and password should be “admin” and “admin” – click login once you have entered the credentials.
4. Go to **System Tools > Firmware Upgrade**.
5. Click **Choose File** to locate the downloaded firmware file most likely from your downloads folder, and click **Upgrade**.

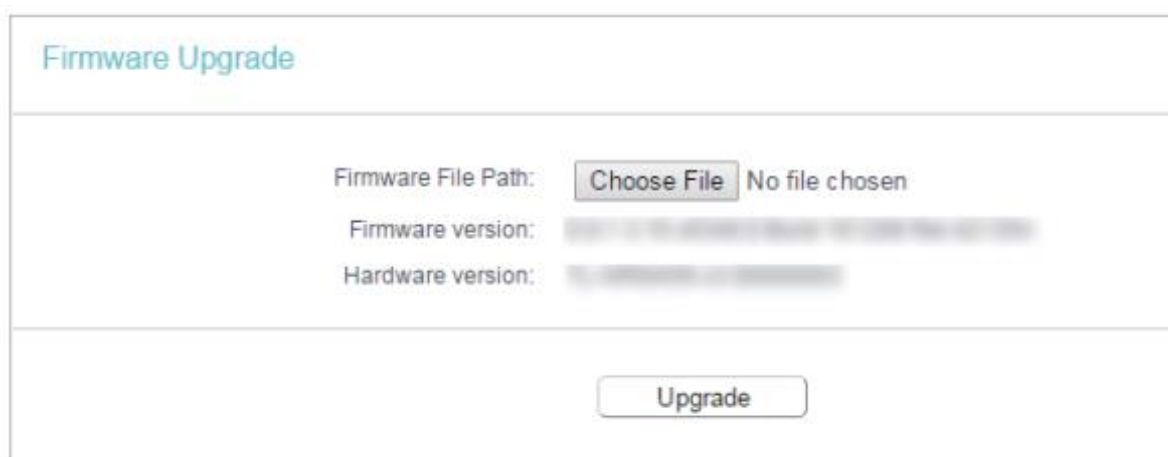

6. Wait for upgrade to complete and reboot the router.
7. After the upgrade, the version will be updated to Build 181213

Status

Firmware Version: 0.9.1 4.16 v0001.0 Build 181213 Rel.63587n
Hardware Version: Archer C20 v4 00000004

8. Try and connect to the Wifi with the Wifi details on the router.
 9. Check your browsing is working.
-