



## Upgrading Firmware for TP-Link Archer C20 v4.x

1. Check that you are in fact upgrading the C20 v4 – the model should be “**Archer C20**” and the number should say “**v4**”

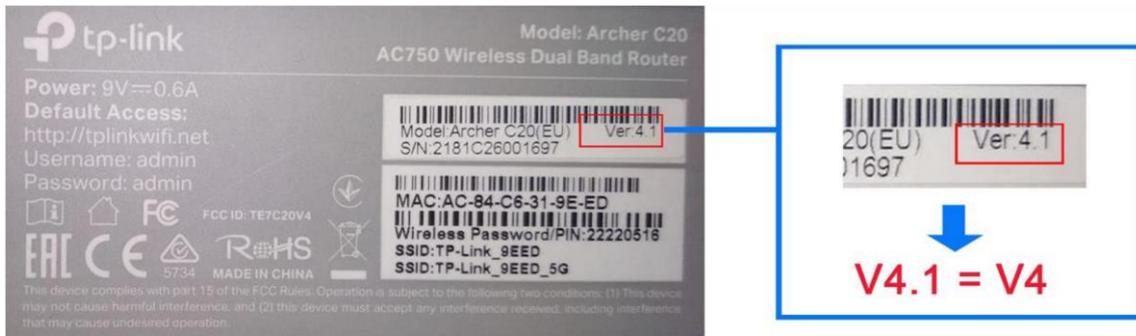

2. Download the latest firmware file for the router 📄 [HERE](#)
3. Connect to the router either via a LAN cable connecting your Laptop or PC to the router directly or by connecting a device, such as a phone or tablet, to the wireless network.
4. Log in the router’s management interface by browsing to here. <http://192.168.0.1/> the username and password should be “admin” and “admin” – click login once you have entered the credentials.
5. Go to **System Tools > Firmware Upgrade**.
6. Click **Choose File** to locate the downloaded firmware file most likely from your downloads folder, and click **Upgrade**.

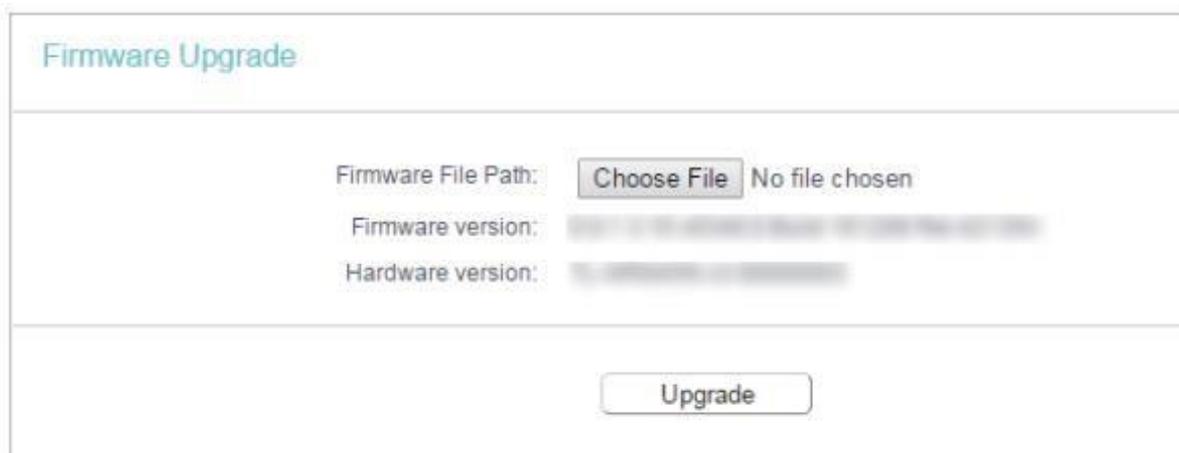

7. Wait for upgrade to complete and reboot the router.

8. After the upgrade, the version will be updated to Build 181213

#### Status

Firmware Version: 0.9.1 4.16 v0001.0 Build 181213 Rel.63587n

Hardware Version: Archer C20 v4 00000004

9. Try and connect to the Wifi with the Wifi details on the router.

10. Check your browsing is working.